

Mini Korean Barbecue Grill | KQB-29E



Online Warranty Registration



Please read these instructions and warranty information carefully before use and keep them handy for future reference.

USER MANUAL

請即進行保用登記!

有關保用條款細則，請看本說明書最後一頁。

Please register your warranty information now!

For Warranty Terms & Conditions,
please refer to the last page of this user manual.


Table of Contents

Safety Instructions	04
Product Structure	04
Operation Instructions	05
Care & Maintenance	06
Technical Specifications	06
Warranty Terms & Conditions	11

Safety Instructions


- This product is only suitable for indoor use only.
- Appliance must be placed on a level and sturdy countertop during operation.
- Keep appliance at least 50cm away from walls during operation.
- Use only 3-pin plug socket with reliable earth connection.
- During operation, keep appliance away from flammables or items that may explode.
- During operation, be cautious that areas surrounding the heat-emitting parts of the appliance may be hot. Take care to prevent from getting burnt.
- During operation, do not leave the appliance unattended.
- The appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or any individual lacking experience and knowledge, unless they have been given supervision or instruction by a person responsible for their safety.
- Unplug the power cord and let the appliance cool before cleaning or washing, or when the product is not in use.
- Do not attempt to repair the appliance yourself. All repairs must be conducted by the manufacturer, its service agent or similarly qualified persons.
- If power cord is damaged, immediately stop using, and have the cord replaced by the manufacturer, its service agent or similarly qualified persons.
- Do not submerge, spray or splash the appliance with any liquid.

 Product Structure


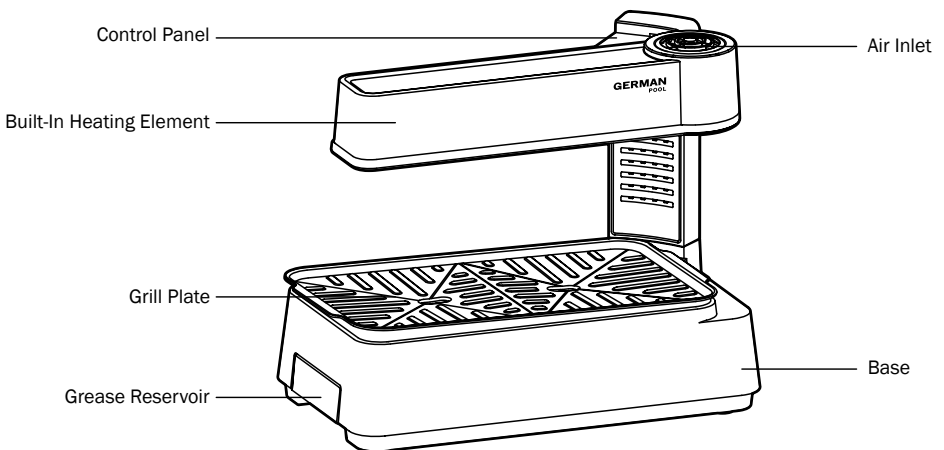


Operation Instructions

 - Place main unit on a level surface and place clean grill plate onto the base.

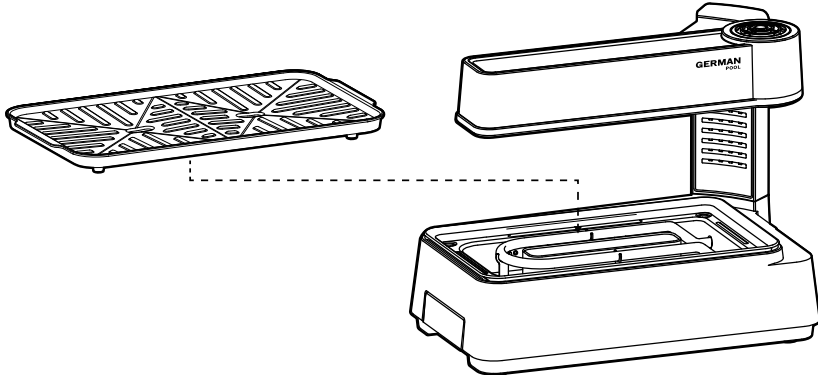

- Connect power cable to wall socket. Make sure your household power supply is compatible with that required of the appliance.
- Press HEATING button (🔥) to select heating mode; press once is 'TOP/BOTTOM' (halogen+tubular heating element); press twice is 'TOP'(halogen heating only); press three times is 'BOTTOM'(tubular heating element only). Pressing 4th time returns to 'TOP/BOTTOM' and cycle begins again.

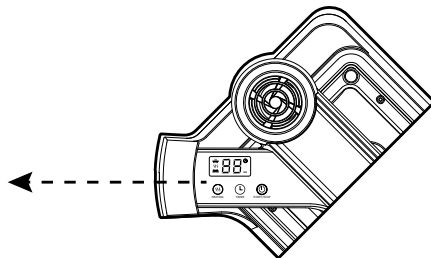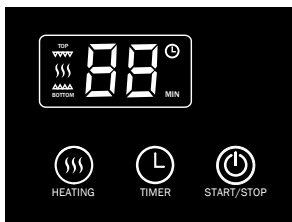  

- After heating mode is selected, press 'START/STOP' (🔌) button to start the machine. Halogen and/or tubular heating element will heat up.
- Press 'TIMER' button (🕒) to preset cooking time. Default timer is 20 minutes, each press of 'TIMER' button (🕒) increases timer by 1 minute. Long pressing will make timer increase by 5-minute increments.
- After preheating for 2 minutes, place food onto the grill pan. Adjust heating modes according to need.
- Press 'START/STOP' button (🔌) to stop machine after use. The grill fan will continue to run for 5 minutes to dissipate residual heat.



CAUTION!

- Do not turn off socket power supply until machine has completely cooled down.
- If machine is used frequently, it is not necessary to turn off socket power supply.

Care & Maintenance

- Before cleaning, unplug machine from power socket, and make sure grill is cooled to room temperature.
- Remove grill from the main body and clean with warm water. Do not use abrasive material to clean grill, to avoid damaging the non-stick coating.
- Pull out the grease reservoir, empty out the grease and wash with detergent. Use only warm cloth to wipe the main body, do not use abrasive material to avoid scratching the surface. Afterwards, wipe with clean dry cloth. Do not wash directly with water.
- Wipe the main body and grill plate with soft warm cloth. For stubborn stains, wipe with neutral cleansing agent, then use soft warm cloth to wipe off residual stain.
- Do not immerse machine in water or rinse it under tap.
- Regularly clean the product to avoid malfunction.
- May use cotton swabs to clean air inlet and outlet vents to avoid dirt accumulating. To clean off grease, use soft toothbrush with non-abrasive cleansing agent to gently brush the vents.
- When the product is not in use, please store in a dry and ventilated place.



WARNING!

- Take care that even after machine has been turned off, grill plate may still be hot. Do not touch with bare hands to avoid getting burnt!
- Do not let children use product unless under adult supervision!

Technical Specifications

Model No.	KQB-29E
Power	900W
Voltage / Frequency	220V / 50Hz
Temperature Range	150 °C / 250 °C
Timer Range	60 minutes
Product Dimensions	(H) 262 (W) 330 (D) 215 mm
Net Weight	2.27kg

Specifications are subject to change without prior notice.

If there is any inconsistency or ambiguity between the English version and the Chinese version, the Chinese version shall prevail.

Refer to www.germanpool.com for the most up-to-date version of the Operating Instructions.

目錄

安全注意事項 08

產品結構 08

操作說明 09

清潔與保養 10


規格 10

保用條款 11

安全注意事項


- 本產品只供室內使用。
- 使用本機時，必須平穩放在工作枱上，嚴禁傾斜。
- 使用本機時，產品至少離牆面50厘米以上。
- 使用本機時，所用的電源插座必須是3孔，有可靠接地線的安全插座。
- 使用本機時，須遠離易燃易爆物品。
- 使用本機時，須注意產品灼熱的表面，以防燙傷。
- 在使用本機的過程中須由專人看管，請勿離開。
- 請勿讓兒童或智力障礙人士使用或操作本機。
- 不使用本機或清潔產品前必須拔掉電源插頭線。
- 請勿自行修理產品的任何部份，必須要由專業的技術人員修理。
- 如果本機電源線損壞，必須停止使用，更換本機專用的電源線後方可使用。
- 嚴禁向本機灑水或將本機浸入水中。

 
產品結構

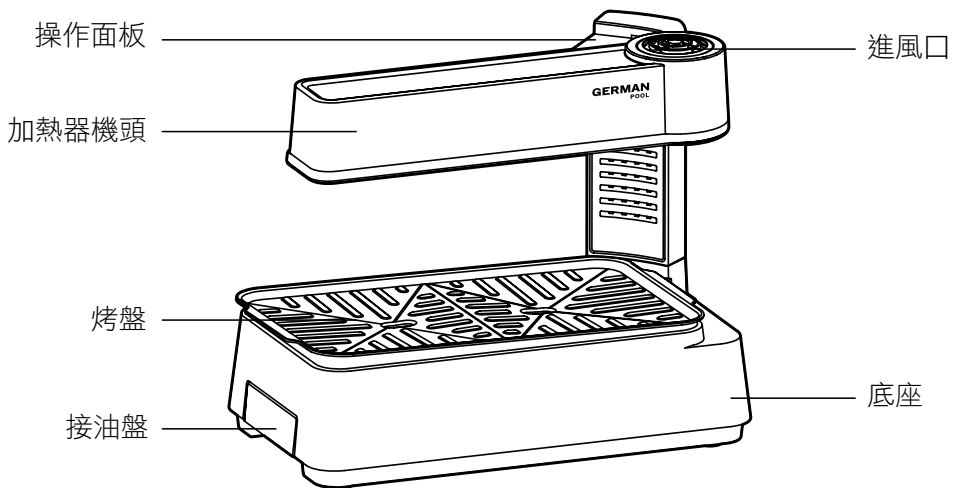





操作說明

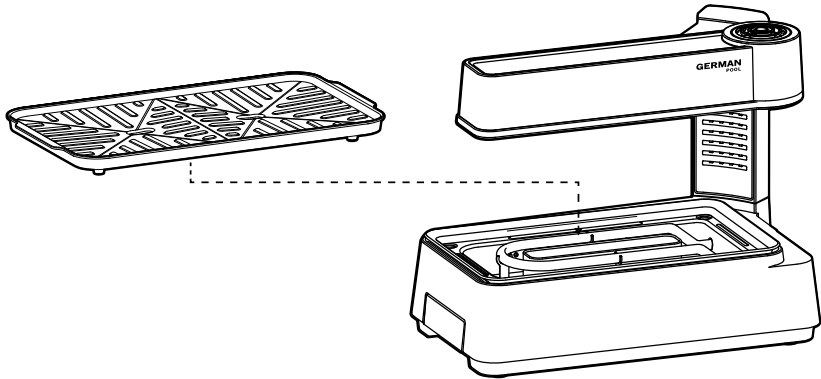 - 把主機放在水平的桌面上，將清潔乾淨的烤盤放在主機底座上。

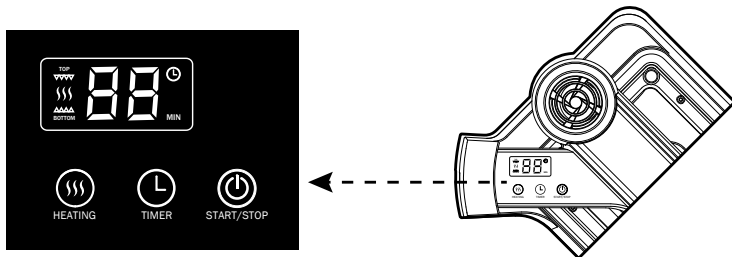 

- 把電源插頭插入固定電源插座內（注意插座的電壓與要求的電壓一致）。
- 輕觸「加熱」按鍵，可以選擇加熱模式；檔位順序循環為：上下加熱（光波加熱+發熱管加熱）、上加熱（光波加熱）、下加熱（發熱管加熱）。



- 選擇完成後，輕觸「啟動/停止」鍵進入工作模式，這時光波管或發熱管通電發熱，產品開始加熱工作。
- 輕觸「定時」按鍵，可以設置烹調時間，默認為20分鐘，每按一下以1分鐘遞增，長按此鍵可快速遞增。
- 預熱約2分鐘後，把需要烤製的食物放在烤盤上面烹調；過程中可根據需要來調整高低加熱檔位。
- 使用完畢後，輕觸「啟動/停止」鍵，此時爐頭風機繼續運行5分鐘散熱。



警告!

- 必須待機器冷卻後方可關閉總電源。
- 若經常使用本機進行烹調，可以不用關閉總開關。

清潔保養

- 清潔保養時請先把電源線拔離插座，並確認產品表面的溫度涼至室溫後方可進行。
- 將烤盤從主機上取出，用溫水清潔，切勿用研磨性材料，以免損壞表面不黏塗層。
- 將底座下方的接油盤取出，將盒內的油倒掉，並將其清潔乾淨；機身表面髒污，請用溫布擦拭，切勿用研磨性材料以免損壞產品表面，再用抹布擦拭，不能直接用水擦拭。
- 機體、烤盤以柔軟的溫布擦拭，不易擦拭之油污，可用中性洗潔劑擦拭後，再以柔軟的溫布擦拭殘渣。
- 機體切勿直接用水沖洗或浸入水中刷洗。
- 經常保持整個產品清潔，以免導致產品失靈。
- 吸氣及排氣孔表面可用棉花棒將塵埃除去，如有油污，可用牙刷加少許不損器具的清潔劑小心清除。
- 產品不用時請放置於通風乾燥處。



警告!

- 產品使用後，烤盤表面尚有餘熱，請勿用手觸摸，小心燙傷！
- 請勿讓小孩在沒有大人的監護下使用本產品！

規格

型號	KQB-29E
功率	900W
電壓 / 頻率	220V / 50Hz
溫度控制範圍	150°C / 250°C
時間控制範圍	60分鐘
機身尺寸	(H) 262 (W) 330 (D) 215 mm
淨重	2.27kg

產品規格及設計如有變更，恕不另行通知。
中英文版本如有出入，一概以中文版為準。
本產品使用說明書以 www.germanpool.com 網上版為最新版本。

保用條款

此保用提供德國寶產品之機件在正常使用下壹年保用(自購買日起計算)。

* 貴戶須在購機十天內，以下列其中一種方式向本公司登記資料，保用手續方正式生效：

1) 填妥本公司網頁內之保用登記表格

www.germanpool.com/warranty

2) 填妥保用登記卡，郵寄至本公司。



Warranty Terms & Conditions

Under normal operations, the product will be guaranteed for one year, with full warranty provided by German Pool (effective from the date of purchase).

* This warranty is not valid until customer registration information is received by our Service Centre within 10 days of purchase via one of the following means:

1) Visit our website and register online:

www.germanpool.com/warranty

2) Complete all the fields on the attached Warranty Card and mail it back to our Customer Service Centre.



另請填妥以下表格並與正本發票一併保存，以便維修時核對資料。用戶提供之所有資料必須正確無誤，否則免費保用將會無效。 Please fill out the form below. This information and the original purchase invoice will be required for any repairs. Warranty will be invalid if information provided is found to be inaccurate.

型號 Model No. : **KQB-29E**

機身號碼 Serial No. : _____ 發票號碼 Invoice No. : _____

購買商號 Purchased From : _____ 購買日期 Purchase Date : _____

- 未能出示購買發票正本者，將不獲免費維修服務。
- 用戶應依照說明書的指示操作。本保用並不包括：
 - 上門安裝、檢驗、維修或更換零件之人工以及一切運輸費用；
 - 因天然與人為意外造成的損壞 (包括運輸及其他)；
 - 電源接合不當、不依說明書而錯誤或疏忽使用本機所引致之損壞。
- 於下列情況下，用戶之保用資格將被取消：
 - 購買發票有任何非認可之刪改；
 - 產品被用作商業或工業用途；
 - 產品經非認可之技術人員改裝或加裝任何配件；
 - 機身編號被擅自塗改、破壞或刪除。
- 總代理有權選擇維修或更換配件或其損壞部份。
- 產品一經被轉讓，其保用即被視作無效。

- Customer who fails to present original purchase invoice will not be eligible for free warranty service.
- Customer should always follow the operating instructions. This warranty does not apply to:
 - labour costs for on-site installation, check-up, repair, replacement of parts and other transportation costs;
 - damages caused by accidents of any kind (including material transfer and others);
 - operating failures resulting from applying incorrect voltage, improper usage, and/or unauthorized installations or repairs.
- This warranty is invalid if:
 - the purchase invoice is modified by an unauthorized party;
 - the product is used for any commercial or industrial purposes;
 - the product is repaired or modified by unauthorized personnel, or unauthorized parts are installed;
 - the serial number is modified, damaged or removed from the product.
- German Pool will, at its discretion, repair or replace any defective part.
- This warranty will be void if there is any transfer of ownership from the original purchaser.

客戶服務及維修中心

中國香港

九龍灣啟興道1-3號

九龍貨倉10樓

電話：+852 2333 6249

傳真：+852 2356 9798

電郵：repairs@germanpool.com

中國澳門

澳門俾利喇街145號

寶豐工業大廈3樓

電話：+853 2875 2699

傳真：+853 2875 2661

Customer Service & Repair Centre

Hong Kong, China

10/F, Kowloon Godown

1-3 Kai Hing Road, Kowloon Bay,

Kowloon, Hong Kong

Tel : +852 2333 6249

Fax : +852 2356 9798

Email : repairs@germanpool.com

Macau, China

3/F, Edifício Industrial Pou Fung,

145 Rua de Francisco Xavier Pereira,

Macau

Tel : +853 2875 2699

Fax : +853 2875 2661

此保用只適用於香港及澳門

This warranty is valid only in Hong Kong and Macau

German Pool (Hong Kong) Limited

Hong Kong, China

Room 113, Newport Centre Phase II, 116 Ma Tau
Kok Road, Tokwawan, Kowloon, Hong Kong
Tel: +852 2773 2888
Fax: +852 2765 8215

Mainland China

8th, Xinxiang Road, Wusha Industrial Park,
Daliang, Shunde, Foshan, Guangdong
Tel: +86 757 2980 8308
Fax: +86 757 2980 8318

Macau, China

3/F, Edifício Industrial Pou Fung,
145 Rua de Francisco Xavier Pereira, Macau
Tel: +853 2875 2699
Fax: +853 2875 2661



香港《S MARK》
安全認證



中國標榜/家電行業
十大影響力品牌



CEO非凡品牌大賞



香港優質商標



香港工商業獎



2007
最具潛質
創星品牌企業獎



香港中小企業
最佳拍檔大獎



香港消費者推祟品牌



香港《心嚮》
優質服務證書



香港名牌十年成就獎
HONG KONG TOP BRAND TEN YEAR
ACHIEVEMENT AWARD

©All rights reserved. Copying, reproducing or using the contents of this manual is not allowed without prior authorization from German Pool, violators will be prosecuted.