

## Mini Pressure Cooker

## PRC-256



Online Warranty Registration



Please read these instructions and warranty information carefully before use and keep them handy for future reference.

# USER MANUAL

請即進行保用登記！  
有關保用條款細則，請看說明書最後一頁。

---

**Please register your warranty information now !**  
**For Warranty Terms & Conditions,**  
**please refer to the last page of this user manual.**

# Table of Contents

---

Warnings & Safety Precautions	04
Product Structure	07
Operation Instructions	08
Cleaning & Maintenance	11
Troubleshooting	12
Technical Specification	13
Warranty Terms & Conditions	23

# Warnings & Safety Precautions

## **WARNING!**

Read all instructions carefully before using this product.

- This product is for domestic indoor use only. If this product is used for any commercial, industrial, rental or other purposes, product warranty will be VOIDED.
- This product is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this product by an adult responsible for their safety.
- Mind your children and DO NOT let children play with this product.
- Cleaning and user maintenance shall not be made by children without supervision.
- Check the voltage indicated on the rating label before using this product.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazards.
- Unplug this product from the power source before cleaning and maintenance.
- Contact German Pool authorized service technician for repair or maintenance of this product.









## **WARNING!**

- The contents of this page concern safety, users must comply and follow with caution.
- The precautions in this section pertain primarily to the proper use of this product, and the precautions explain the level of danger, potential damages and possible accidents.
- The instructions in this section are divided into two levels: “Warnings” and “Caution”.

**Note:** Operating this product against the instructions may lead to damage of this product, your property, or even a risk to your personal safety.

## **WARNING!** Not following the instructions for use may lead to danger.

Icons in this section :  represents “mandatory”;  represents “prohibited”.

1.  **WARNING!** DO NOT retrofit this product by yourself; DO NOT disassemble or repair this product unless by a professional repair technician, otherwise it may lead to fire, electric shock or injury.
2.  **WARNING!** DO NOT allow young children to touch this product.
3.  **WARNING!** Use only with a separate and reliably grounded socket with a rated current of 10A or higher. If the power cord is damaged, it must be replaced by German Pool Customer Service & Repair Centre.
4. Read this user manual thoroughly before using this product.
5.  Use only with 220 V~ power supply.
6.  DO NOT use this product in a humid environment or an environment with inflammables.
7.  DO NOT use this product outdoors. When product is not in use, it must be unplugged from the power socket.
8.  DO NOT place this product close to any heat source; DO NOT place this product on a slanted or unstable surface.
9.  Grip this product by the handles on the bottom of the main body when moving this product around.

# Warnings & Safety Precautions

---

 
10. **⚠ DO NOT** damage the sealing ring, **DO NOT** use other substitute sealing rings, and **DO NOT** use tension rings to increase the sealing.
  11. **⚠ DO NOT** place any heavy object on top of the pressure relief valve. **DO NOT** substitute the pressure relief valve with other objects.
  12. **⚠** Wash the cooker lid regularly to keep it clean, and make sure the pressure relief valve and floater are not blocked.
  13. **⚠** Before the floater has sunk down, **DO NOT** open the cooker lid by force.
  14. **⚠ DO NOT** place or use the inner pot directly on other heat sources.
  15. **⚠ DO NOT** rinse or immerse the main unit in water.
  16. **⚠** After prolonged use, discoloration may occur on the inner pot's coating. However, it has no adverse effects on usage or health. Please feel free to use it with confidence.
  17. **⚠ DO NOT** use metal or harsh cleaning tools to clean the inner pot to avoid damaging its coating and diminishing its non-stick properties.
  18. **⚠** Before cleaning this product, make sure to unplug the power cord from the socket.
  19. **⚠ DO NOT** touch any hot parts such as the heating plate, inner pot, pressure relief valve, floater or the cooker lid.
  20. **⚠** If there is excessive venting around the lid, it is considered an abnormal phenomenon. At this time, the safety pressure release device will activate for protection. Immediately unplug the power cord, stop using this product and contact German Pool Service and Repair Center.
  21. **⚠ DO NOT** use this product to cook food that may block the pressure relief valve, such as leafy vegetables like kelp, seaweed or cabbage, and fragmented food such as corn kernels etc.
- 
1. **DO NOT** use this product in a humid environment or an environment with inflammables.
  2. Strictly follow the instructions in "Operation Instructions" section with regard to the height of food or liquid inside the inner pot.
  3. **DO NOT** damage the sealing ring, **DO NOT** use other substitute sealing rings, and **DO NOT** use tension rings to increase the sealing.
  4. Wash the cooker lid regularly to keep it clean, and check to make sure the pressure relief valve and floater are not blocked.
  5. Before the floater has sunk down, **DO NOT** open the cooker lid by force.
  6. **DO NOT** place any heavy object on top of the pressure relief valve. **DO NOT** substitute the pressure relief valve with other objects.
  7. **DO NOT** use a cloth to block the area around the lid and outer pot hinge area to avoid compromising the safety performance.
  8. The contact surface between the bottom of the inner pot and the heating plate must be kept clean at all times. **DO NOT** place or use the inner pot directly on other heat sources. **DO NOT** use other containers as a substitute for the inner pot.
  9. The inner pot is made of stainless steel and has a coating. To avoid scratching the pot, use only wooden or plastic rice scoop.
  10. When lifting the pressure relief valve for venting, **DO NOT** place hands or face near the pressure relief valve steam vent. During cooking, **DO NOT** touch the cooker exterior to avoid burns.

# Warnings & Safety Precautions

 
---


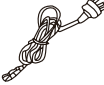
11. After cooking, this product will automatically enter Keep Warm function. The usage time is not recommended to exceed 6 hours to avoid affecting the cooking performance.
12. During reheating process, if excessive venting around the lid occurs, it is considered an abnormal operating condition. At this time, the safety pressure release device will activate for protection. Immediately disconnect the power supply, stop using this product, and contact German Pool Customer Service and Repair Center.
13. DO NOT move this product immediately after cooking. Wait until the product exterior has cooled down before moving it. When lifting this product, lift it by the body, DO NOT lift this product by the cooker lid handle.
14. If malfunction occurs during usage, stop using this product immediately and contact German Pool Customer Service and Repair Center.
15. DO NOT dismantle this product or replace parts by yourself. This product requires specialized parts by German Pool.
16. If the power cord is damaged, it must be replaced with a specialized cord by German Pool. Please contact German Pool Customer Service and Repair Center for replacement. DO NOT dismantle this product by yourself.
17. Keep this product out of reach of children at all times in order to avoid scalding, electric shock or injury.
18. Before opening the cooker lid, make sure the pressure inside the cooker has been completely released.
19. The water collector must be installed before usage, and it must be washed regularly.
20. When using this product for the first time, the product may emit a small amount of smoke. This is a normal phenomenon, and the smoke will dissipate after dry boiling for a few minutes.

# Product Structure

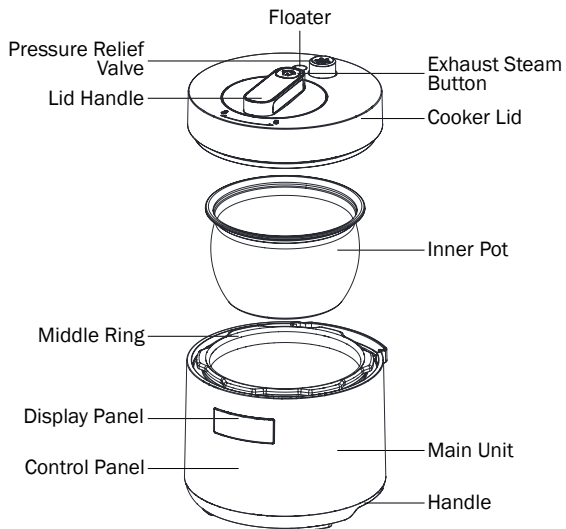 


## Installing & Removing The Sealing Ring

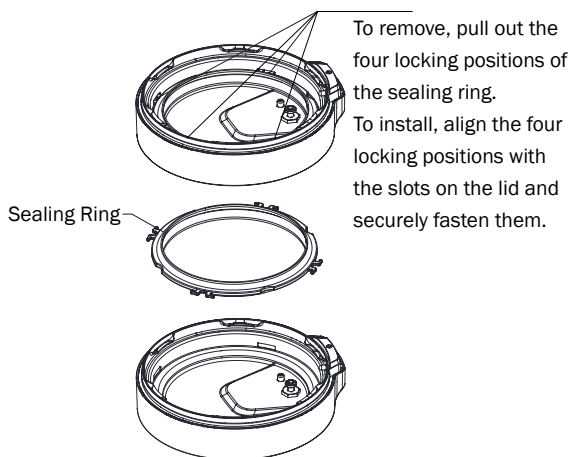


			
Water Collector	Soup Ladle	Measuring Cup	Power Cord

# Operation Instructions

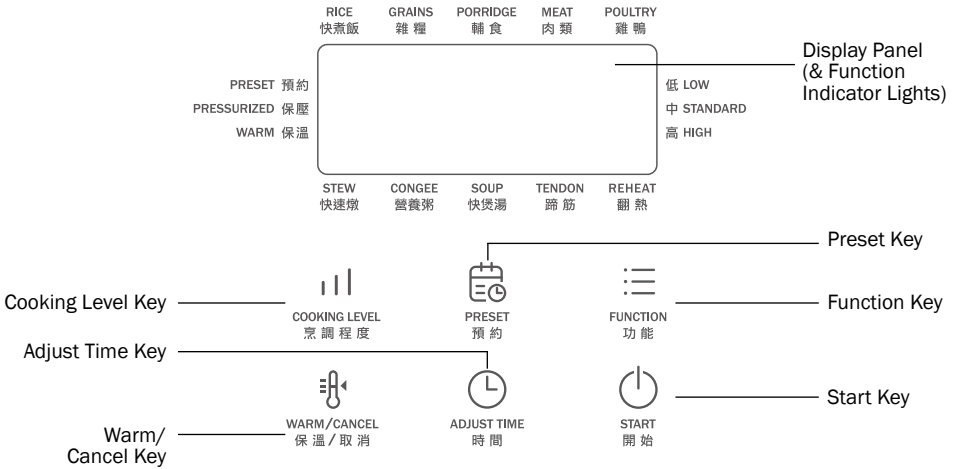


## Preparations Before Cooking

 
1. Open The Lid: hold the lid handle, turn the lid clockwise to open position, then lift off the lid.

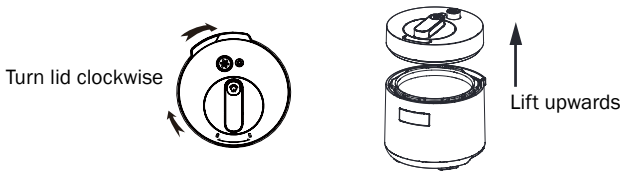

 2. Take out the inner pot, put in food and water, DO NOT exceed the max. mark or fall below the lowest marking. If cooking food that will expand in water, the food and water must not exceed the 3/5 marking on the inner pot.



 
3. Place inner pot into main unit, make sure the bottom of the inner pot and the heating plate are dry. DO NOT place foreign objects on the heating plate and the lid. After placing the inner pot, rotate it gently to make sure it is in good contact with the heating plate.

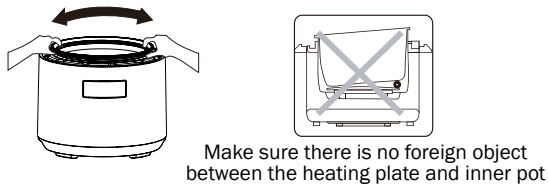




# Operation Instructions

 4. Close the lid: hold the lid handle, and turn it anticlockwise until it is securely locked, and you hear a “click” sound. Before closing the lid, check to make sure the sealing ring has been properly installed inside the lid.

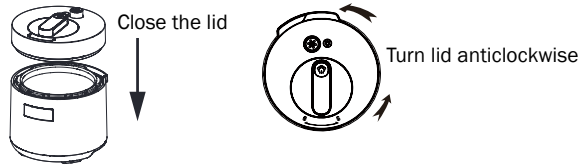

5. Install the pressure relief valve, check to make sure the exhaust steam button is in the sprung up position. If it is not, press the button until it is sprung up completely. Check to make sure the floater is sunk down (before cooking, the floater should sink down).

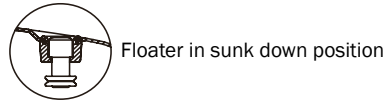

6. Connect the power source, display panel shows “- - - -”, product enters standby state.

## Begin Cooking

1. In standby state, tap Start Key to enter working state, display panel shows “0000”.
2. Tap Function Key repeatedly to select desired function, the corresponding Indicator Light blinks, display panel shows default pressurized time.
3. After selecting function, tap Level Key to select Low / Medium / High cooking level, the corresponding Indicator Light blinks, display panel shows the default pressurized time for that selected function and cooking level.
4. To adjust pressurized time, repeatedly tap Time Key until it reaches your desired time, then tap Start Key to start cooking.

Function	Rice	Grains	Porridge	Meat	Poultry
<b>Default Time</b>	12 min	40 min	55 min	40 min	30 min
<b>Low</b>	8 min	35 min	20 min	25 min	25 min
<b>Medium</b>	12 min	40 min	55 min	40 min	30 min
<b>High</b>	20 min	50 min	65 min	50 min	40 min
<b>Adjustable Time</b>	8-20 min	35-50 min	20-65 min	25-60 min	25-40 min
Function	Stew	Congee	Soup	Tendon	Reheat
<b>Default Time</b>	45 min	23 min	20 min	45 min	15 min
<b>Low</b>	20 min	20 min	10 min	30 min	10 min
<b>Medium</b>	45 min	23 min	20 min	45 min	15 min
<b>High</b>	55 min	45 min	25 min	55 min	25 min
<b>Adjustable Time</b>	20-55 min	20-45 min	10-25 min	30-55 min	10-25 min

### Note:

When selecting function or during cooking, tap Warm/Cancel Key to return to standby state.

# Operation Instructions

---

5. When cooking is completed, the product automatically enters Keep Warm state, Warm Indicator Light lights up constant.
6. To retrieve food, tap Warm/Cancel Key to exit Keep Warm state, push Exhaust Steam Button on the lid handle to release pressurized air from the Pressure Relief Valve until the floater sinks down completely.



## **⚠ WARNING!**

When cooking liquid food (such as congee or food with sauce), DO NOT release pressure immediately after cooking. User must wait for the cooker to cool down and the floater sinks down by itself, otherwise food will spray out from the pressure relief valve.

## **On-Timer Function**

1. In standby state, tap Start Key to enter working state, display panel shows "0000".
2. Tap Timer Key to enter timer setting. Timer Indicator Light blinks, default timer is set for 30 minutes.
3. Tap Time Key to adjust timer, each tap increases timer by 30 minutes. Timer is adjustable from 30 min to 24 hrs.
4. After setting the timer, select function, cooking level and pressurized time, then tap Start Key. Product will start to countdown, when countdown hits zero, product will automatically start cooking.

## **Note:**

During timer setting or timer countdown, tap Warm/Cancel Key and product will return to standby state.

## **Keep Warm Function**

 
1. In standby state, tap Start Key to enter working state, display panel shows "0000".
2. Tap Warm/Cancel Key to enter Keep Warm state, the maximum keep warm time is 6 hours.
3. During Keep Warm state, tap Warm/Cancel Key to cancel Keep Warm.

# Cleaning & Maintenance


## ⚠ WARNING!

Unplug the product from the power source and let product cool down completely before cleaning.

1. Remove the lid and the inner pot, clean with detergent, rinse thoroughly with clean water then wipe dry with a soft cloth.
2. Wipe down the main unit. DO NOT rinse or immerse the main unit in water.
3. Remove and clean the water collector, wipe dry then reinstall.
4. DO NOT use metal scourer pad or hard objects to clean the inner pot to avoid scratching and damaging the pot.
5. When cleaning the floater, gently move it up and down to remove any food debris, and make sure to rinse off any debris on the floater's sealing ring.

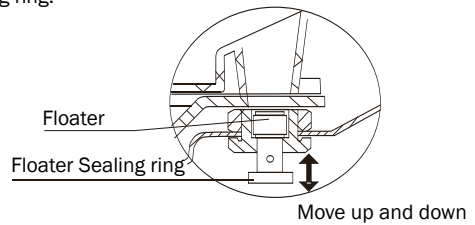

 6. Remove the pressure relief valve, rinse clean, then reinstall.

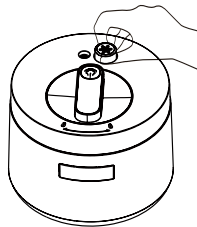

# Troubleshooting

## ⚠ WARNING!

- DO NOT repair or disassemble this product by yourself. Before maintenance work, turn off the product and unplug product from the power source.
- If user encounters problems not mentioned below or if problem persists, please contact German Pool Customer Service & Repair Centre for assistance. This product must be repaired by German Pool Customer Service & Repair Centre only; if user entrusts personnel not designated by German Pool, or if user performs repair work on their own, there may be a risk of personal injury or property loss.

Problem	Possible Cause	Solution
Lid cannot close	Sealing ring not installed properly	Install sealing ring properly
	Floater is stuck	Use a chopstick to push down the floater
Lid cannot open	Floater has not sunk down after pressure is released	Use a chopstick to push down the floater
Lid is leaking air	Sealing ring has not been installed	Install sealing ring
	There is food debris on sealing ring	Clean sealing ring
	Sealing ring is damaged	Replace sealing ring
	Lid is not closed properly	Close lid properly
Floater is leaking air	There is food debris on the floater's sealing ring	Clean floater's sealing ring
	Floater's sealing ring is damaged	Replace floater's sealing ring
Floater doesn't float up	There is too little food and water in the pot	Make sure there is enough food and water in the pot
	Lid or pressure relief valve is leaking air	Contact German Pool Customer Service & Repair Centre
Display shows error code E1	Sensor short circuit	Unplug product from the power source, replug and restart. If problem persists, contact German Pool Customer Service & Repair Centre
Display shows error code E2	Sensor open circuit	
Display shows error code E3	Inner pot temperature too high	Allow product to cool down then restart
Display shows error code E4	Pressure switch malfunction	Unplug product from the power source, replug and restart. If problem persists, contact German Pool Customer Service & Repair Centre

# Technical Specification

---

<b>Model</b>	<b>PRC-256</b>
Voltage / Frequency	220V-240 V / 50-60 Hz
Power	600 W
Capacity	2.5 L
Working Pressure	0-70 kPa
Product Dimensions	(H) 250 (W) 235 (D) 240 mm
Net Weight	3.1 kg

- Specification is subject to change without prior notice.
- If there is any inconsistency or ambiguity between the English version and the Chinese version, the Chinese version shall prevail.
- Refer to [www.germanpool.com](http://www.germanpool.com) for the most update version of the user manual.

# 目錄

---

警告及注意事項 15

產品結構 17

使用說明 18

清潔與保養 21

故障檢修 22

技術規格 22

保用條款 23

# 警告及注意事項

## ⚠ 警告！

使用本產品前，請仔細閱讀所有說明。

- 本產品只限家居室內日常使用，如產品作任何商業、工業、出租或其他用途，保用證即告失效。
- 請勿讓兒童或身體有殘障、精神不健全及對本產品缺乏經驗或知識的人士單獨使用本產品；如需使用，必須要在負責任的成年人監管下方可使用。
- 應照顧好兒童，確保他們不會玩耍本產品。
- 無成年人監管下，勿讓兒童清潔及維護本產品。
- 使用前，請先檢查所有電壓是否與本產品標籤上的電壓相符。
- 如果電源線損壞，為免發生意外，電源線必須由廠方、廠方指定的維修中心或同等合格的技術人員進行更換。
- 清潔或檢查本產品前，必須先關機及拔掉插頭。
- 請聯繫德國寶授權的技術人員進行維修或保養本產品。

## ⚠ 警告！

- 本項所有內容均與安全有關，用戶必須遵守。
- 本項中的注意事項主要是為了正確地使用本產品，注意事項中解釋了危險、損害的程度及可能發生的事故。
- 本項的說明分為「警告」及「注意」兩個等級。

**注意：**違章操作可能損壞您的物品、財產，甚至會危害到您的人身安全。

## ⚠ 警告！未按使用說明操作會有危險。

本項中圖標表示的意思：**!**表示「強制」的內容；**⊘**表示「禁止」的內容

1. **⊘ 警告！**嚴禁進行改造，非專業修理人員嚴禁拆卸或維修本產品，易發生火災、觸電和受傷事故。
2. **⊘ 警告！**嚴禁讓幼小兒童觸碰本產品。
3. **!** **警告！**必須單獨使用額定電流10A以上的插座，並可靠接地。如電源線損壞，必須用專用軟線或從德國寶客戶服務及維修中心買到專用的組件來更換。
4. 使用前必須詳閱本說明書。
5. **⚡** 必須使用220V~電源。
6. **⊘** 本產品嚴禁放置在易燃物品或潮濕環境中使用。
7. **⊘** 嚴禁在戶外使用本產品，不使用本產品時必須拔下電源插頭。
8. **⊘** 本產品嚴禁靠近熱源，嚴禁傾斜或放置在不穩定場所。
9. **!** 搬移本產品時必須握住機身底部的提手。
10. **!** 嚴禁損傷密封圈，嚴禁用其他膠圈取代，嚴禁用張力圈來增加密封。
11. **!** 限壓排氣閥上嚴禁增加任何重物或以其他物品代替。
12. **!** 防堵罩必須經常清洗，保持潔淨，並保持限壓排氣閥和浮子閥暢通。
13. **!** 浮子未落下，嚴禁強行打開鍋蓋。
14. **!** 嚴禁將內鍋直接放在其他熱源上使用。

 
# 警告及注意事項

---


15. **❗** 嚴禁將本產品主機浸入水中或用水沖洗。
  16. **❗** 長時間使用後，內鍋塗層可能會出現變色，但在使用及健康上都沒有任何不良影響，請放心使用。
  17. **❗** 內鍋表面附有塗層，嚴禁使用金屬或粗糙清洗工具擦拭，以免刮傷塗層，影響不黏效果。
  18. **❗** 清潔本產品前，必須先將電源線插頭拔離電源插座。
  19. **❗** 嚴禁觸摸發熱部份，如發熱盤、內鍋、限壓排氣閥、浮子閥、鍋蓋。
  20. **❗** 若發生鍋蓋周邊大量排氣，屬於非正常現象，此時安全卸壓裝置起了保護，必須立即拔除電源插頭，停止使用，聯絡德國寶客戶服務及維修中心。
  21. **❗** 嚴禁用本產品烹調可能引起排氣孔堵塞的食物，包括葉片狀食物如紫菜、白菜、海帶，及碎片狀依食物如粟米渣等。
- 
1. 嚴禁將本產品放在易燃物品及潮濕環境中使用。
  2. 加入內鍋的食物和水的高度必須按「使用說明」章節中的步驟進行操作。
  3. 嚴禁損傷密封圈，嚴禁用其他膠圈取代，嚴禁使用張力圈來增加密封。
  4. 必須經常清洗防堵罩，保持潔淨；必須經常檢查限壓排氣閥，以確保其不被堵塞。
  5. 浮子未落下時，嚴禁強行打開煲蓋。
  6. 限壓排氣閥上嚴禁添加任何重物或以其他物體代替。
  7. 嚴禁用抹布堵塞鍋蓋與外鍋扣合處周邊，以免影響安全性能。
  8. 內鍋底部與發熱盤接觸面必須保持清潔，內鍋嚴禁放在其他熱源上燒煮，嚴禁用其他容器替代內鍋。
  9. 內鍋塗有塗層或採用不銹鋼材質，為防止劃傷，必須使用木質或塑膠飯勺。
  10. 提起限壓排氣閥排氣時，嚴禁將手或臉靠近限壓排氣閥排氣管，工作時嚴禁觸摸外殼，以免燙傷。
  11. 烹飪結束後本產品自動進入保溫功能，使用時間不宜超過6小時，以免影響烹調效果。
  12. 在加熱烹調過程中，若發現鍋蓋周邊大量排氣，屬於非正常工作現象，此時安全洩壓裝置起子保護，必須立即切斷電源，暫停使用，聯絡德國寶客戶服務及維修中心。
  13. 烹調完成後嚴禁立即搬移本產品，必須先等外殼冷卻下來，搬移時請提起機身，嚴禁透過鍋蓋手柄提起產品。
  14. 在使用過程中若發生故障，必須暫停使用，聯絡德國寶客戶服務及維修中心。
  15. 嚴禁自行拆卸產品或用其他零件更換，本產品僅可使用本公司的零配件。
  16. 如電源軟線損壞，必須用專用軟線或從德國寶客戶服務及維修中心買到的專用組件來更換，嚴禁自行拆卸。
  17. 嚴禁將本產品放在小孩能觸及的地方使用，否則會引起燙傷，觸電和受傷。
  18. 打開鍋蓋前，必須確保蓋內壓力充分釋放後方可打開鍋蓋。
  19. 使用前必須安裝集水盒，並經常清洗。
  20. 首次使用本產品時機內可能有煙冒出，屬於正常現象，乾燒幾分鐘後會自動消失。





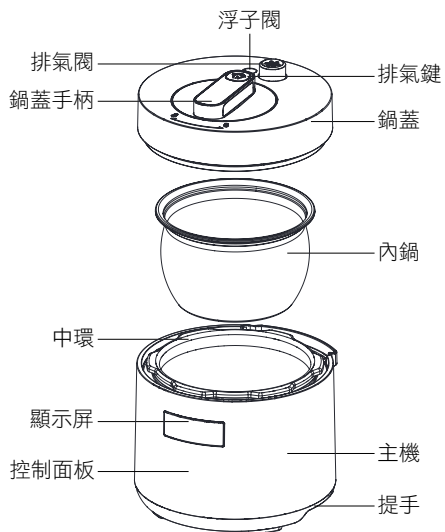

# 產品結構

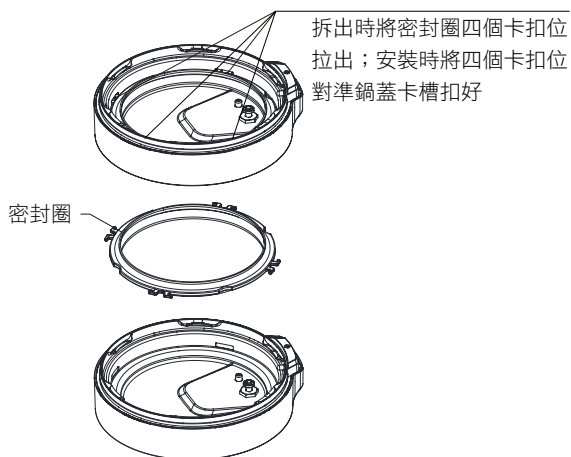 


## 密封圈拆裝方法




			
儲水盒	湯勺	量杯	電源線
 
# 使用說明

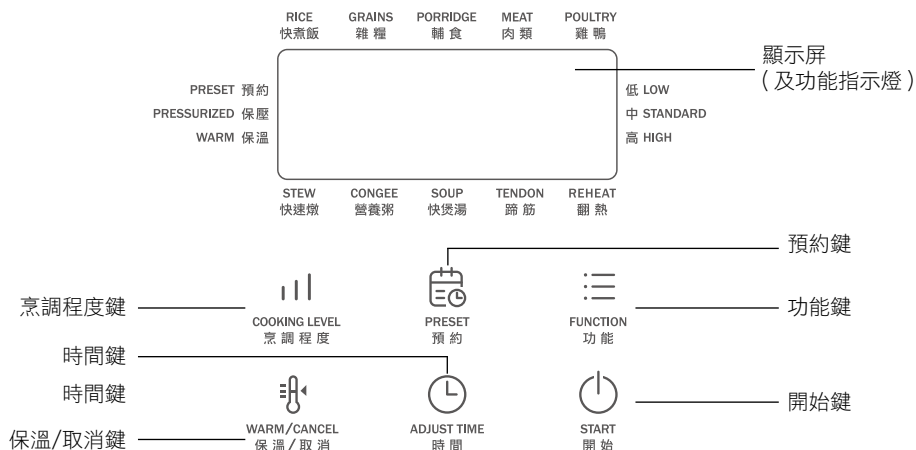

## 烹調前準備工作

 
1. 打開鍋蓋：握緊鍋蓋手柄，順時針方向旋轉鍋蓋至開蓋位置，然後直接向上提起鍋蓋。

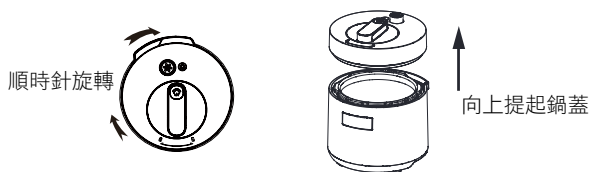

2. 取出內鍋，參照內鍋上的最高水位線放入食材及注水。注意食物和水均嚴禁超過最高水位線或低於最低刻度；如放入遇水膨脹的食物，容量則不得超過內鍋刻度3/5。




 3. 將內鍋放入主機，放入前先把內鍋底部及發熱盤表面抹乾淨，鍋蓋及發熱盤表面嚴禁放有雜物。放入後，左右輕輕旋轉內鍋，保持內鍋與發熱盤接觸良好。

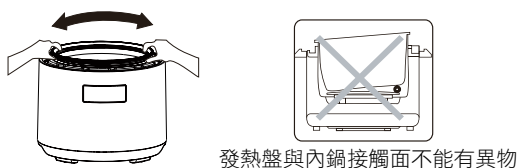

# 使用說明

 4. 關上鍋蓋：握緊鍋蓋手柄，逆時針方向旋轉鍋蓋至鎖緊位置，並聽到「咔嚓」扣合聲。關上鍋蓋前必須檢查密封圈是否已正確安裝在鍋蓋內。

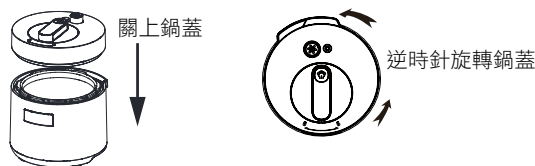

5. 裝上限壓排氣閥，檢查排氣按鈕是否處於彈起狀態，否則將排氣按鈕按起來至最高位置，並檢查浮子是否落下（未加熱工作前浮子處於落下狀態）。



6. 接通電源，顯示屏顯示「----」進入待機狀態。

## 開始烹調

 
1. 接通電源進入待機狀態後，按「開始鍵」進入工作狀態，顯示屏顯示「0000」。
2. 重複按「功能鍵」選擇所需功能，相應指示燈閃爍，顯示屏顯示預設保壓時間。
3. 選擇功能後，按「程度鍵」可選擇低 / 中 / 高三種烹調程度，相應指示燈閃爍，顯示屏顯示所選功能在該烹調程度的預設保壓時間。
4. 如需調整加壓時間，按「時間鍵」，完成後按「開始鍵」進行烹調。

<b>功能</b>	<b>快煮飯</b>	<b>雜糧</b>	<b>輔食</b>	<b>肉類</b>	<b>雞鴨</b>
<b>預設時間</b>	12分鐘	40分鐘	55分鐘	40分鐘	30分鐘
<b>低</b>	8分鐘	35分鐘	20分鐘	25分鐘	25分鐘
<b>中</b>	12分鐘	40分鐘	55分鐘	40分鐘	30分鐘
<b>高</b>	20分鐘	50分鐘	65分鐘	25分鐘	25分鐘
<b>可調時間</b>	8-20分鐘	35-50分鐘	20-65分鐘	25-60分鐘	25-40分鐘
<b>功能</b>	<b>快速燉</b>	<b>營養粥</b>	<b>快煲湯</b>	<b>蹄筋</b>	<b>翻熱</b>
<b>預設時間</b>	45分鐘	23分鐘	20分鐘	45分鐘	15分鐘
<b>低</b>	20分鐘	20分鐘	10分鐘	30分鐘	10分鐘
<b>中</b>	45分鐘	23分鐘	20分鐘	45分鐘	15分鐘
<b>高</b>	55分鐘	45分鐘	25分鐘	55分鐘	25分鐘
<b>可調時間</b>	20-55分鐘	20-45分鐘	10-25分鐘	30-55分鐘	10-25分鐘

## 注意：

在選擇功能或烹調期間按「保溫/取消鍵」可返回待機狀態。

5. 烹調完成後，產品自動進入保溫狀態，保溫指示燈常亮。
6. 如需取用食物，按「保溫/取消鍵」退出保溫狀態，按下鍋蓋
7. 手柄上的排氣按鈕讓限壓排氣閥排氣，直至浮子落下。

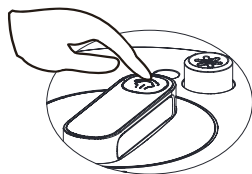

# 使用說明

---

## **▲ 警告！**

如烹調流質食物（如粥類、黏性液體等），烹調完成後嚴禁馬上排氣，須等待冷卻讓浮子自然落下，否則食物會在排氣閥噴出。

## **預約烹調**

1. 接通電源進入待機狀態後，按「開始鍵」進入工作狀態，顯示屏顯示「0000」。
2. 按「預約鍵」進入預約設置，預約指示燈閃爍，預設為30分鐘。
3. 按「時間鍵」調整預約時間，每按一次增加30分鐘，可調時間為30分鐘至24小時。
4. 設置完成後，選擇所需功能、烹調程度及調整加壓時間，完成後按「開始鍵」，產品進入倒數狀態，並在倒數完畢後自動烹調。

## **注意：**

在設置預約或倒數期間按「保溫/取消鍵」可返回待機狀態。

## **保溫功能**

 
1. 接通電源進入待機狀態後，按「開始鍵」進入工作狀態，顯示屏顯示「0000」。
2. 按「保溫/取消鍵」進入保溫狀態，最長保溫時間為6小時。
3. 保溫期間如需取消，再按一次「保溫/取消鍵」。

# 清潔及保養


## ⚠ 警告！

產品清洗前必須先拔除電源插頭，待機身冷卻後再清洗。

1. 將內鍋和鍋蓋取出，可用清潔劑清洗，然後用清水沖洗，再用乾軟布擦乾。
2. 用抹布將主機擦乾淨。嚴禁將主機浸在水中清洗或用水噴淋。
3. 將儲水盒拆下清洗，用乾毛巾擦乾後裝回原位。
4. 清洗內鍋時嚴禁用金屬絲或其他堅硬用具擦洗，以免造成內鍋括傷。
5. 清洗浮子閥時，用手把浮子輕輕上下移動，並把浮子密封圈上的食物殘渣一併用水沖洗乾淨。

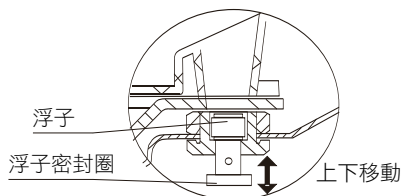

 6. 清洗限壓閥時，把限壓閥拆出用水清洗乾淨，然後把限壓閥重新裝回。

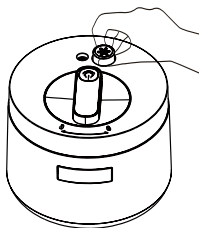

# 故障檢修

## ▲ 警告！

- 嚴禁自行維修或拆卸本產品。維修前必須將產品關機並拔除電源插頭。
- 如下表未提及問題，請聯絡德國寶客戶服務及維修中心。本產品須由德國寶客戶服務及維修中心進行維修，若委託非德國寶指定人員或用戶自行進行維修，可能存在人身傷害或財產損失風險。

故障情況	可能原因	解決方法
鍋蓋難以合上	密封圈未放置好 浮子卡住推桿	放好密封圈 用筷子壓下浮子
鍋蓋難以打開	排氣後浮子未落下	用筷子輕壓浮子
鍋蓋漏氣	未放上密封圈 密封圈沾有食物殘渣 密封圈破損 未合好鍋蓋	放上密封圈 清潔密封圈 更換密封圈 正確合上鍋蓋
浮子閥漏氣	浮子閥密封圈沾有食物殘渣 浮子閥密封圈破損	清潔浮子閥密封圈 更換浮子閥密封圈
浮子不能上升	鍋內食物和水過少 鍋蓋或限壓排氣閥漏氣	按規定放入食物和水 聯絡德國寶客戶服務及維修中心
顯示屏顯示「E1」故障代碼	傳感器短路	拔除電源插電後重新接電，如問題持續，聯絡德國寶客戶服務及維修中心
顯示屏顯示「E2」故障代碼	傳感器斷路	聯絡德國寶客戶服務及維修中心
顯示屏顯示「E3」故障代碼	鍋內溫度超溫	待產品冷卻後再使用
顯示屏顯示「E4」故障代碼	壓力開關故障	拔除電源插電後重新接電，如問題持續，聯絡德國寶客戶服務及維修中心

# 技術規格

型號	PRC-256
電壓/頻率	220V-240 V / 50-60 Hz
功率	600 W
容量	2.5 L
工作壓力	0-70 kPa
產品尺寸	(H) 250 (W) 235 (D) 240 mm
淨重	3.1 kg

- 產品規格及設計如有變更，恕不另行通知。
- 中英文版本如有出入，一概以中文版為準。
- 本產品使用說明書以[www.germanpool.com](http://www.germanpool.com)網上版為最新版本。

# 保用條款

# Warranty Terms & Conditions

此保用提供德國寶產品之機件在正常使用下壹年保用(自購買日起計算)。

Under normal operations, the product will guarantee a 1-year full warranty provided by German Pool (effective from the date of purchase).

\*貴戶須在購機十天內，以下列其中一種方式向本公司登記資料，保用手續方正式生效：

- 1) 填妥德國寶VIP手機應用程式保用登記表(掃描右方二維碼)
- 2) 填妥本公司網頁保用登記表  
[www.germanpool.com/warranty](http://www.germanpool.com/warranty)
- 3) 填妥保用卡郵寄至本公司



\* This warranty is not valid until customer registration information is received by our Service Centre within 10 days of purchase via one of the following means:

- 1) Visit our VIP App and register online:  
(Scan the QR Code on the right)
- 2) Visit our website and register online:  
[www.germanpool.com/warranty](http://www.germanpool.com/warranty)
- 3) Complete the attached Warranty Card and mail it back to our Customer Service Centre.



另請填妥以下表格並與正本發票一併保存，以便維修時核對資料。用戶提供之所有資料必須正確無誤，否則免費保用將會無效。Please fill out the form below. This information and the original purchase invoice will be required for any repairs. Warranty will be invalidated if information provided is found to be inaccurate.

型號 Model No. : PRC-256

機身號碼 Serial No. : \_\_\_\_\_

購買商號 Purchased From : \_\_\_\_\_

發票號碼 Invoice No. : \_\_\_\_\_

購買日期 Purchase Date : \_\_\_\_\_

1. 未能出示購買發票正本者，將不獲免費維修服務。
2. 用戶應依照說明書的指示操作。本保用並不包括：
  - 上門安裝、檢驗、維修或更換零件之人工以及一切運輸費用；
  - 因天然與人為意外造成的損壞(包括運輸及其他)；
  - 電源接合不當、不依說明書而錯誤或疏忽使用本機所引致之損壞。
3. 於下列情況下，用戶之保用資格將被取消：
  - 購買發票有任何非認可之刪改；
  - 產品被用作商業或工業用途；
  - 產品經非認可之技術人員改裝或加裝任何配件；
  - 機身編號被擅自塗改、破壞或刪除。
4. 總代理有權選擇維修或更換配件或其損壞部份。
5. 產品一經被轉讓，其保用即被視作無效。

1. Customer who fails to present original purchase invoice will not be eligible for free warranty service.
2. Customer should always follow the operating instructions. This warranty does not apply to:
  - labour costs for on-site installation, check-up, repair, replacement of parts and other transportation costs;
  - damages caused by accidents of any kind (including material transfer and others);
  - operating failures resulting from applying incorrect voltage, improper usage, and unauthorized installations or repairs.
3. This warranty is invalid if:
  - the purchase invoice is modified by an unauthorized party;
  - the product is used for any commercial or industrial purposes;
  - the product is repaired or modified by unauthorized personnel, or unauthorized parts are installed;
  - the serial number is modified, damaged or removed from the product.
4. German Pool will, at its discretion, repair or replace any defective part.
5. This warranty will be void if there is any transfer of ownership from the original purchaser.

## 客戶服務及維修中心

香港

九龍大業街59號

三湘九龍灣貨運中心地下B室

電話：+852 2773 2888

傳真：+852 2356 9798

電郵：[repairs@germanpool.com](mailto:repairs@germanpool.com)

澳門

澳門青洲大馬路(青洲新路)

515號美居廣場第二期1樓A座

電話：+853 2875 2699

傳真：+853 2875 2661

## Customer Service & Repair Centre

Hong Kong

Unit B, G/F, Sunshine Kowloon Bay

Cargo Centre, 59 Tai Yip Street,

Kowloon, Hong Kong

Tel: +852 2773 2888

Fax: +852 2356 9798

Email: [repairs@germanpool.com](mailto:repairs@germanpool.com)

Macau

A, 1 Andar, Mei Kui Kuong

Cheong Fase 2, No.515 Avenida

Do Conselheiro Borja Macau

Tel: +853 2875 2699

Fax: +853 2875 2661

此保用只適用於香港及澳門

This warranty is valid only in Hong Kong and Macau

## German Pool (Hong Kong) Limited



香港《S MARK》  
安全認證



中國國際家電行業  
十大影響力品牌

CEO

CEO非凡品牌大賞



香港優質商號



香港工商業獎



2007  
最具潛質  
創建品牌企業獎



香港中小企業  
最佳拍檔大獎



香港消費者推崇品牌



香港《Q MARK》  
優質服務證書



香港名牌十年成就獎  
HONG KONG TOP BRAND TEN YEAR  
ACHIEVEMENT AWARD

© All rights reserved. Copying, reproducing or using the contents of this manual is not allowed without prior authorization from German Pool, violators will be prosecuted.